



- **USB hub**
- Connect USB hub to PC and to electricity
- **Ethernet Switch**
- Connect switch to electricity and then plug ethernet cable to the PC/NTB
- **Ambient server**
- Connect ambient server to the switch and electricity
- **Field Metrology Well with readout module Fluke**
- Connect to electricity
- Connect to the USB hub using USB cable
- Turn on
- Warming up 10 minutes

- **Reference**
- Connect to built-in readout module (front panel of well)
- Insert into the correct hole in the well
- **Calibrated Pt100**
- Pulled from the shield
- Insert into the hole in the well
- Connect to built-in readout module (front panel of well)
- **Covered insert with rubber cap**

MicroStep - MIS

Calibration System for Temperature

Mobile/field version