



MicroStep - MIS

Calibration System for Distance

Mobile/field version

- **Ethernet Switch**
- Connect switch to electricity and then plug ethernet cable to the PC/NTB
- **Ambient server**
- Connect ambient server to the switch and electricity
- **Datalogger**
- Connect Datalogger to the switch with ethernet cable.
- Power on datalogger
- **Reference plane**
- Instal plane to correct position

- **Reference**
- Does Not require a connection
- Turn on
- Put in the holder, aim to the reference plane
- Warming up 2 minutes
- **Calibrated sensors**
- Uninstall from station
- Put in the holder, aim to the reference plane
- Connect the calibrated sensors to the datalogger