



MicroStep - MIS

Calibration System for Wind direction and speed

- **Wind Tunnel**
 - Connect and to electricity
 - Turn on the wind tunnel using the rotary switch on the control box
 - Pull red button

- **Reference and Flow Calculation system**
 - Connect to a USB
 - Connect to electricity

- **Turntable**
 - Connect to electricity
 - Connect to a USB

- **Calibrated sensor**
 - Connect the cable to the sensor according to the logger scheme close the wind tunnel door
 - Place the anemometer so that the N mark aligns with the laser lines and then tighten the screws