

Wind speed/direction calibrator

Ambient server

to internal ethernet switch

Portable, battery operated field standard with data logger

USB hub

Internal ethernet switch

PC/Notebook

 
MicroStep - MIS

Calibration System for Wind Speed/Direction




USB hub

- Connect USB hub to PC and to electricity

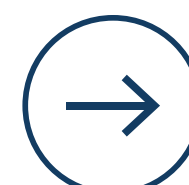


Ethernet Switch

 - Connect switch to electricity and then plug ethernet cable to the PC/NTB

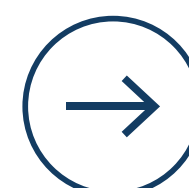

Ambient server

 - Connect ambient server to the switch and electricity

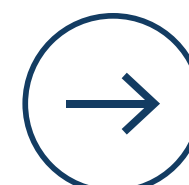

Datalogger

- Connect Datalogger to the switch with ethernet cable. Power on datalogger



Reference and generator wind speed and direction calibrator

- Connect to electricity
- Connect to a USB hub
- Turn on (aprox. 5 second after turning on, you should hear a load beep, if not, unplug/plug in power and USB cable and turn on again)
- Warming up 10 minutes



Wind speed calibration

- Calibrated sensor remove the propeller screw the nut on the exposed screw put in the calibrator – fasten the base and pull the chuck



Wind direction calibration

- Calibrated sensor remove the signpost screw the nut on the exposed screw put in the calibrator – pull the chuck and tighten weakly the base