


Powered for at least 1 hour.



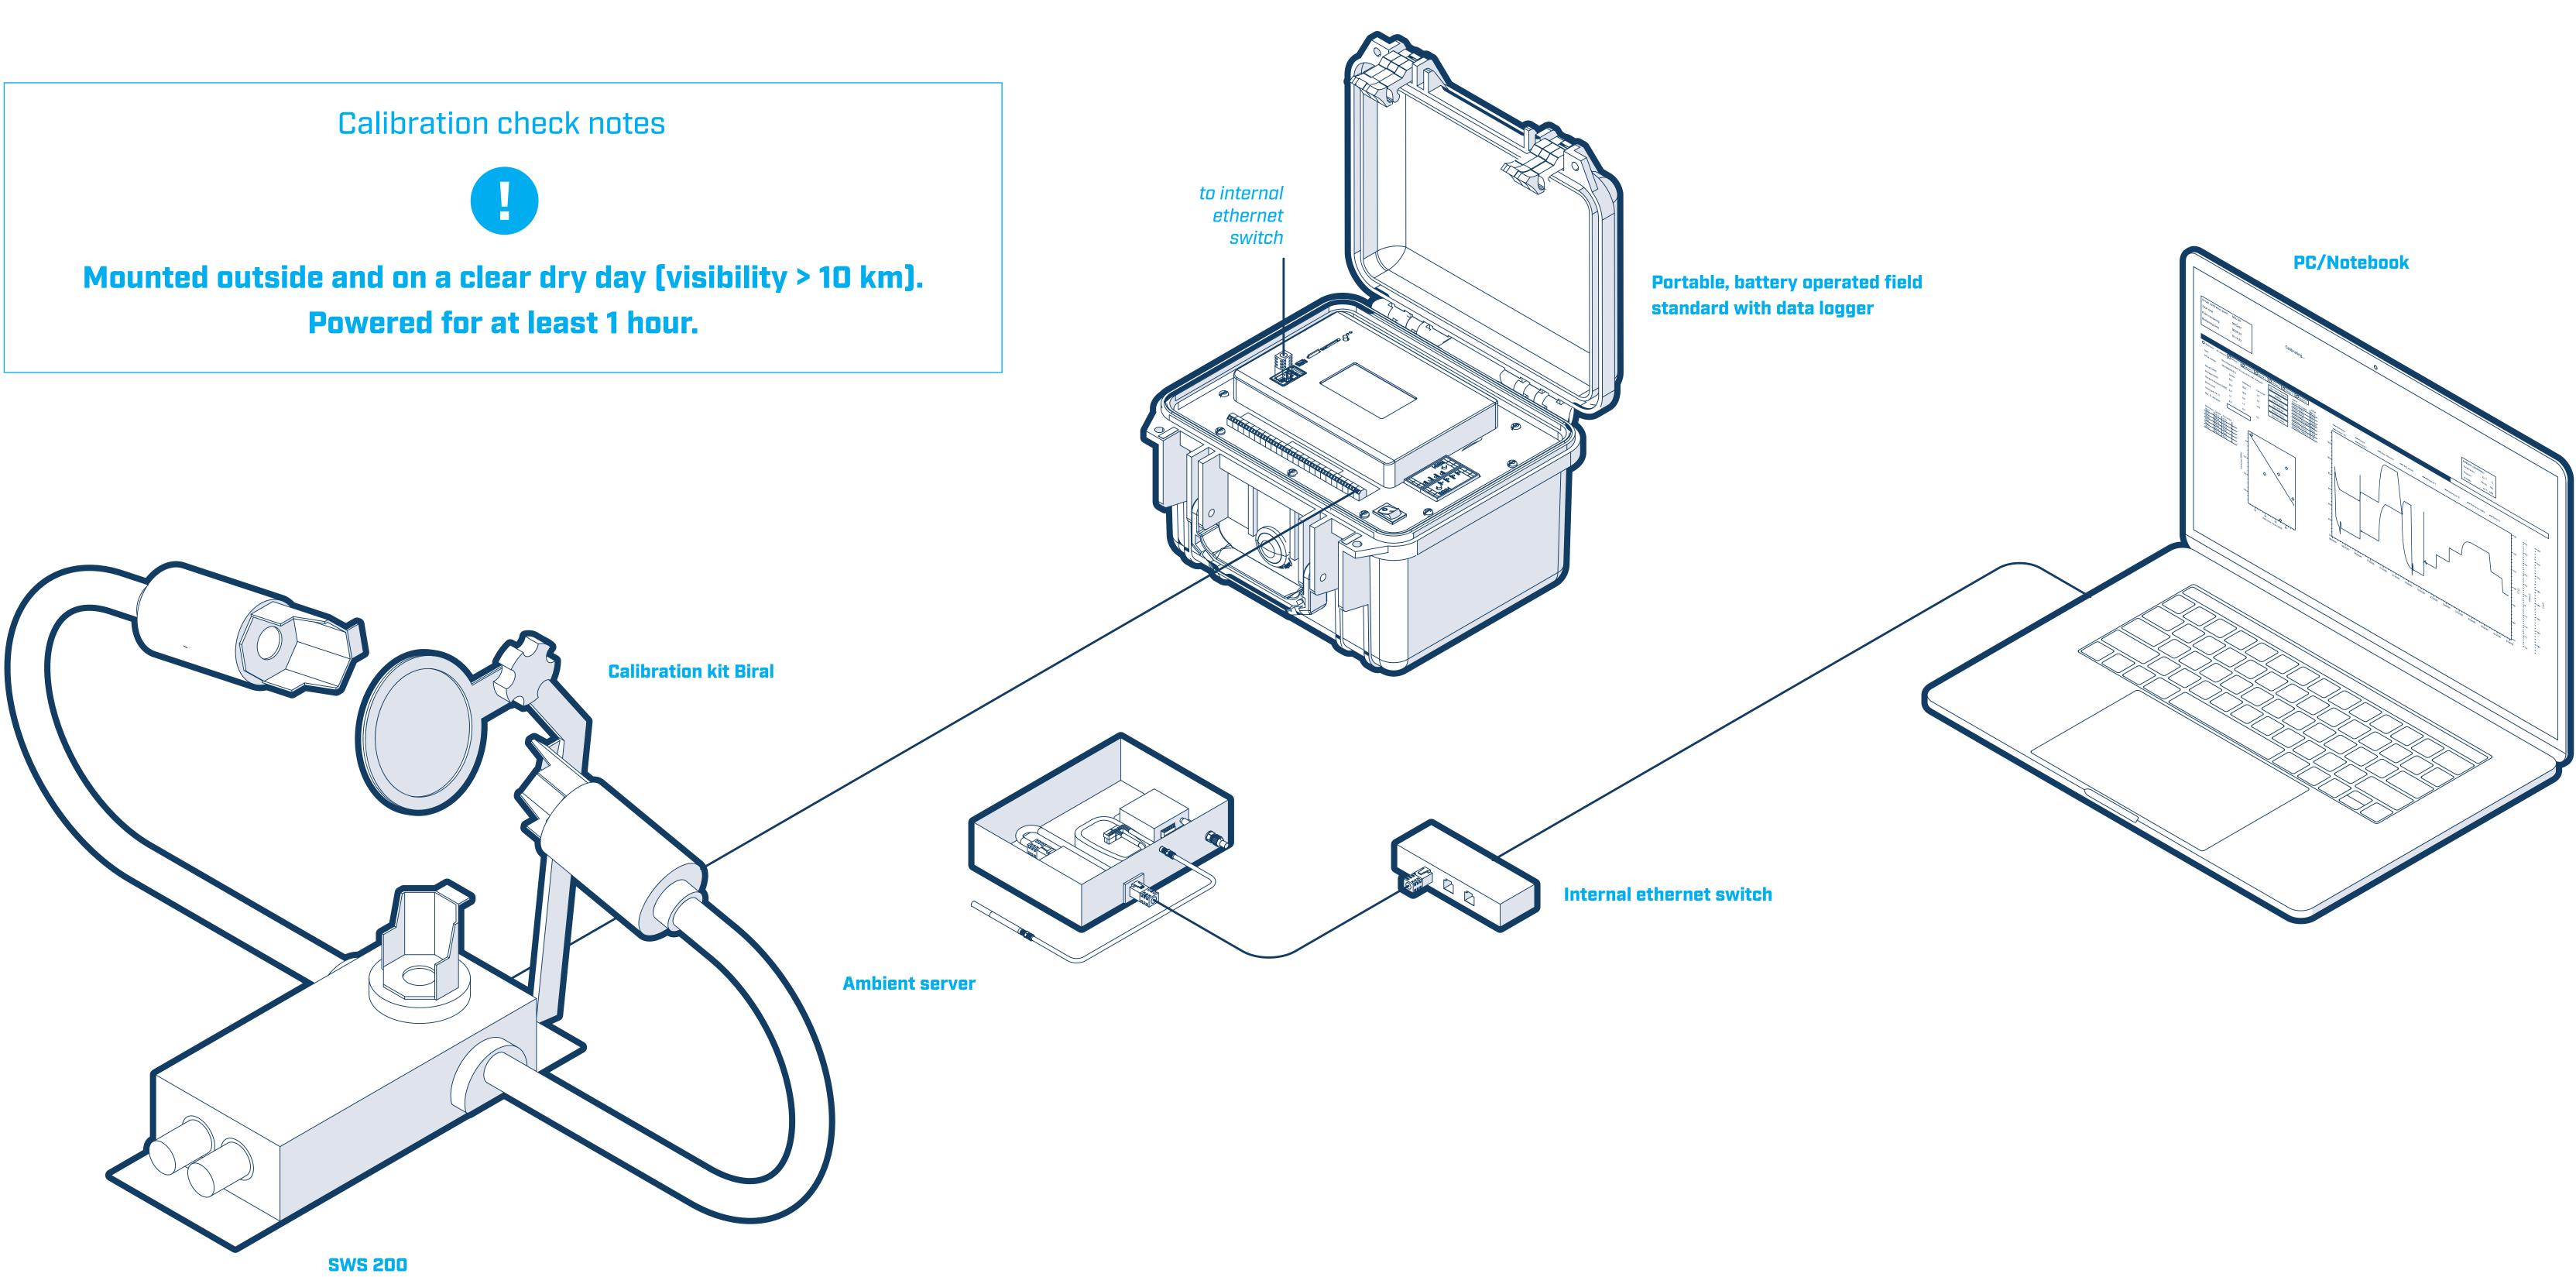

Calibration System for Visibility Mobile/field version

 \rightarrow

Ethernet Switch

- Connect switch to electricity and then plug ethernet cable to the PC/NTB



Ambient server

- Connect ambient server to the switch and electricity



Datalogger

- Connect Datalogger to the switch with ethernet cable.

- Power on datalogger



Calibrated sensor

- Remove from the station - Connect the calibrated sensors to the datalogger



 \rightarrow

Reference (SWS Calibration Kit.)

- Mount the calibration reference plaque - Insert GREY FOAM PLUGS in the front of each window blocking out all light.